 


1. Parts and Functions

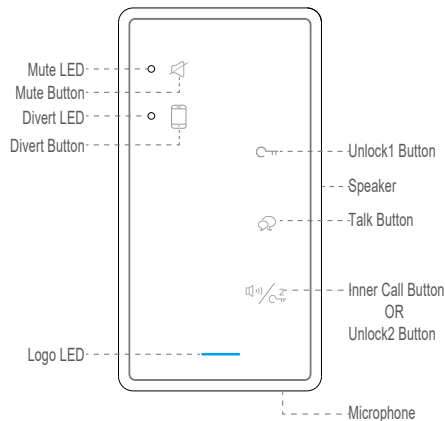

Mute button	<ul style="list-style-type: none"> Press Mute button, to enable "DND" function with Mute LED ON. Press Mute button again, to disable "DND" with Mute LED OFF. Press and hold the Mute button for 3 seconds, to switch to High / Low volume (High by default).
Divert button	<ul style="list-style-type: none"> Press Divert button, to enable divert function with Divert LED ON. Press Divert button again, to disable divert function with Divert LED OFF. Allows you to change the melody of the doorbell, intercom, and external doorbell (Press and hold 3 seconds)
Unlock1 button	<ul style="list-style-type: none"> Press to open the gate.
Speaker	<ul style="list-style-type: none"> Send out sounds of ring tones, audios and alarms.
Talk button	<ul style="list-style-type: none"> Start and end a conversation with a guest.
Inner Call Button or Unlock2 Button	<ul style="list-style-type: none"> In standby mode, press the button to call the intercom connection with devices of the same address. In talk mode, press to open the second input.
Microphone	<ul style="list-style-type: none"> Transfer sound from the uniphone to the door station
Logo LED	<ul style="list-style-type: none"> Light up the logo.

2. Specification

• Power Supply:	DC20-28V
• Power Consumption:	standby 6mA, working 60mA
• Working Temperature:	-15°C ~ +55°C;
• Wiring:	2 wires, non-polarity
• Dimension:	150(H)X80(W)X13.5(D)mm

3. User settings

3.1 Ring Volume

Press and hold the **Mute button** for 3 seconds, to switch to High / Low volume (High by default).

3.2 Ring Tone

Press and hold **Divert button** for 3 seconds, to switch to the next group of ringtones.


4. Installer settings by unlock1 button

setup item	In standby, Press "Unlock1" button to enter to setup mode	
	Press Time	LED Indicator
Address Setting (Default: 01)	6s	"Mute" Led --flashing "Divert" Led--flashing
Call-back Test/ Check the address of DJ9	3s	"Mute" Led --flashing
Set Master / Slave (Default: Master)	9s	"Mute" Led --flashing "Divert" Led--flashing
Regret and Undo previous settings	12s	"Mute" Led --flashing "Divert" Led--flashing "Mute", "Divert" Led--turn off

5. Restore Factory Setting

- Re-power, and during 10s, press and hold the "unlock" button for 12s.
- If sounds long "BEEP+" in one time, DJ9 will be restored to the factory setting.

 6. Basic Connection

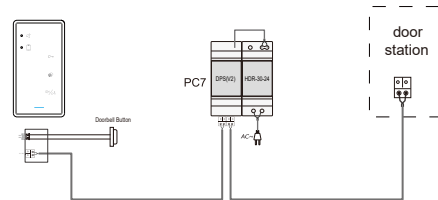

7. Precautions

- The installation and handling of these devices must be carried out by authorized personnel.
- The wiring must run at least 40cm away from any other wiring.
- The audio phone should never be placed near or over a radiator or heat register and should not be placed in a built-in installation such as a bookcase unless proper ventilation is provided.
- All parts should be protected from violence vibration. And not allow to be impacted, knocked and dropped.
- Please do the cleaning with soft cotton cloth, please do not use the organic or chemical detergent. If necessary, please use pure water or dilute soap water to clean the dust.
- Do not open the device in any condition, please call the administrator if needed.