

# Cronus Video Door System

2-wire Series

Installation and User Manual



Digital Touch Screen 7 inch Monitor



## PRECAUTIONS


- Read this manual through before using the product
- Slots and openings in the back of the monitor, are provided for ventilation and to ensure reliable operation of the video monitor or equipment and to protect it from overheating. These openings must not be blocked or covered. The monitor should never be placed near or over a radiator or heat register and should not be placed in a built-in installation such as a bookcase unless proper ventilation is provided
- All parts should be protected from violent vibration. Prevent impacts, knocking and dropping
- Clean the LCD monitor with Plastic Protection cleaner only
- Image distortion may occur if the video door phone is mounted too close to magnetic field e. g. Microwaves, TV, computer etc.
- Please keep away the video door monitor from wet, high temperature, dust, and caustic and oxidation gas in order to avoid any unpredictable damage
- Do NOT open the device in any condition, call the administrator for help if there is any problem or malfunction happens

## CONTENTS

Monitor Parts and Functions.....	1-2
Mounting .....	3
Screen .....	4
Answering a call .....	5
Adjusting screen&volume .....	5
Door Release . ....	7
Intercom Function.....	7
Manual Monitoring . ....	8
Operating Staircase Light . ....	9
Call Divert. ....	9
Monitor settings .....	10
Ringtone settings .....	11
Language . ....	11
Restoring to default settings .....	12
Entering Installer setup . ....	12
Screen calibration.....	16
Specification .....	16



## Monitor Parts and Functions

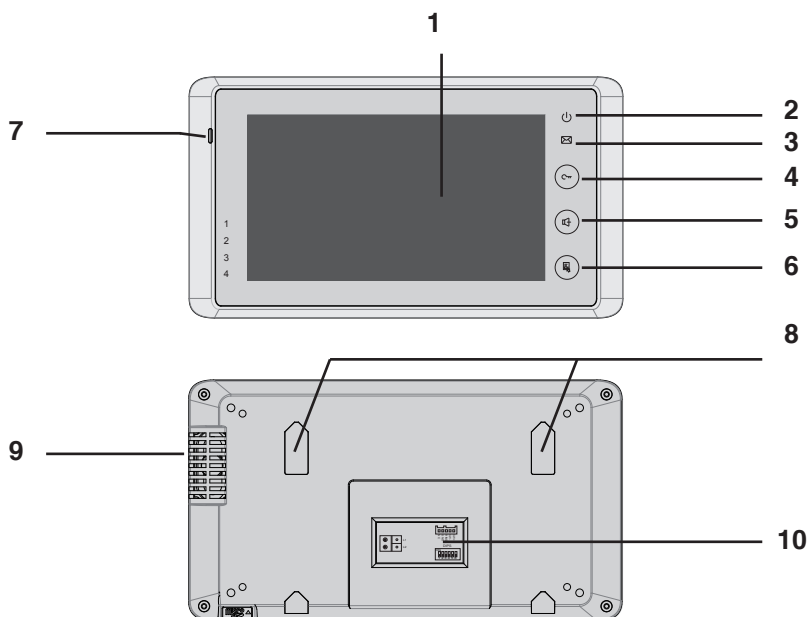

NO.	Item	Description
1	Digital LCD touch screen	• Display visitors' image
2	Power indicator	ON when monitor powered
3	Message indicator	ON when monitor has missed call
4	Unlock button	Press to <b>Unlock door or gate</b>
5	Talk/Mon button	• Press to communicate hands free with visitor • Press to view <b>outside</b> in standby mode
6	MENU button	Press to <b>open Main menu</b>
7	Microphone	Transmits the audio from <b>door station</b>
8	Mounting hook	Use to hang the monitor
9	Speaker	Visitors voice coming from <b>speakers</b>
10	Connection port	Bus connection terminal

---

## Monitor Terminals

**L1,L2:** Bus line terminal



**SW+,SW-:** External Call button connection port

**Ring,GND:** External Ringer connection port

**NC:** Not in use

**DIP switches:**

- DIP 1~DIP 5: User Code setting
- DIP 6: End of line setting. Set ON if the monitor is at the end of the line or if connected with DBC4

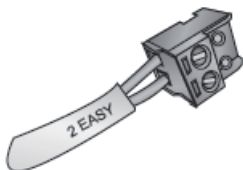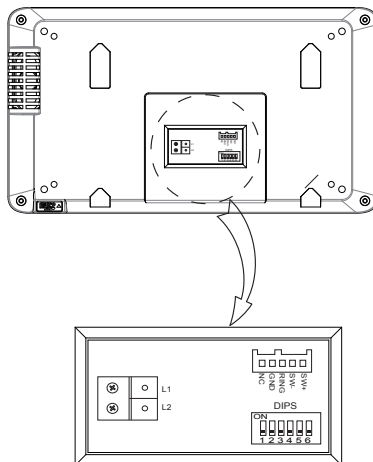

## Additional Call Button


Additional call button can be connected to a monitor via terminals SW+ White and SW- Green wires

Please note: There will be no video on the monitor when somebody rings this call button

## Additional External Ringer

Additional external ringer can be connected to a monitors via terminals RNG - Red wire to a Positive and GND - Black wire to a Negative. One Ringer per monitor. Locate a ringer in a position where you are unlikely to hear the ringing of the monitors; like a garage, shed, or carport

## Monitor Mounting

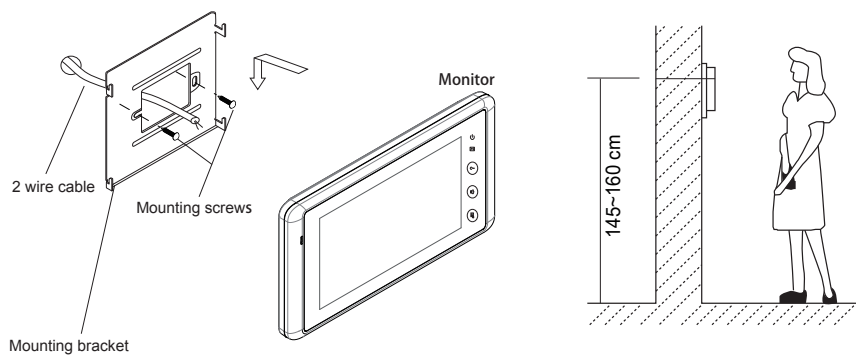


1. Use the screws to fix the mounting bracket on the wall
2. Hang the Monitor on the mounting bracket firmly

## Screen

### Main Menu- Home Page

The Main menu is your starting point for using all the applications on your monitor

Touch screen anywhere and Main menu will appear as following:

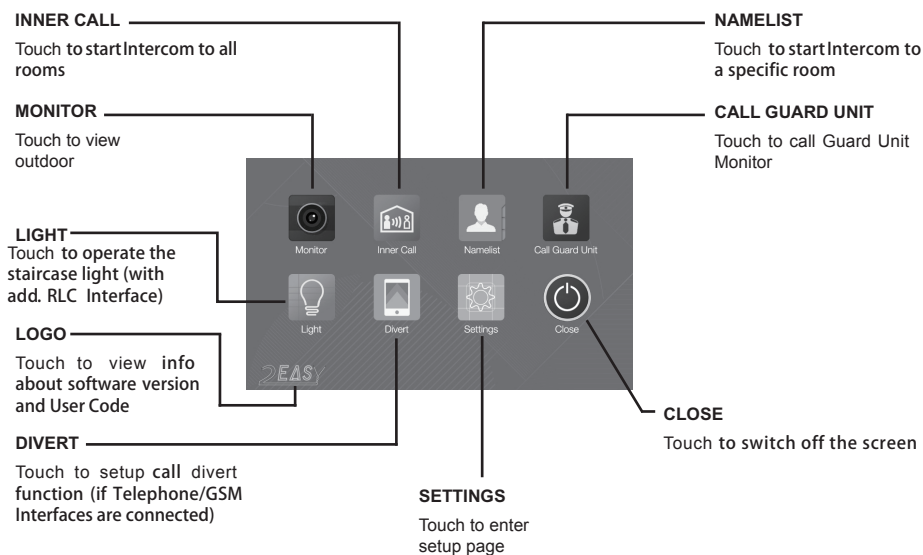

### Icons Visible During Talking


Displays which door station is calling





Displays talking time



# BASIC OPERATIONS
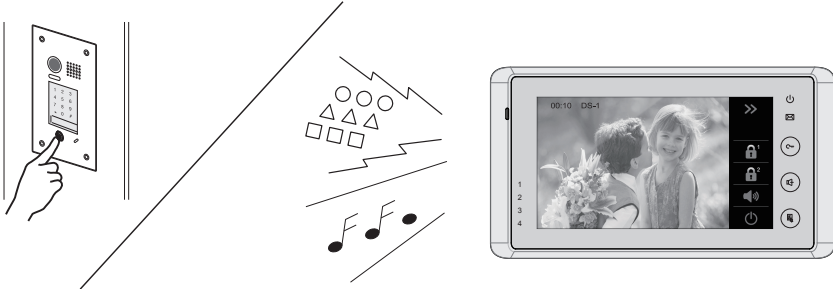
## Answering a Door Call

 

- When Door Station is rung, the monitor comes On with video
- To start conversation touch  **TALK/MON** icon on the button or  **Talk** icon on the screen
- To end conversation touch  **TALK/MON** icon on the button once again or touch  icon on the screen. Monitor will shut down automatically after 40 seconds

## Adjusting Colour, Brightness and Talk Volume

Here you can adjust your monitor properties such as Contrast, Brightness and Colour.

Following adjustments can be performed in 'Manual Monitoring' mode with video from Door Station on a screen



Here you can choose screen ratio 4:3 or 16:9



Here you can adjust Speaker volume. The range are 0 (Mute) ~ 9  
Touch - or + to set desired levels



4 scene modes are available to select: **Normal, Bright, Soft and User**



Screen Contrast. The range is 0~9. Touch - or + to set desired levels




Screen Brightness. The range is 0~9. Touch - or + to set desired levels




Screen Colour. The range is 0~9. Touch - or + to set desired levels

## Electric Lock Release

If system connected to a lock, you can open the lock from the Video Monitor. Video from Door Station must be on the screen to perform unlocking

Touch either  or  icon on the screen or press  **UNLOCK** button on a side to open the lock


If two locks are connected to a door station, touch 

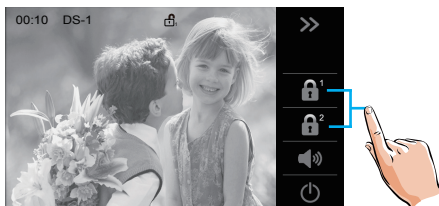



## Intercom Function

When multiple Monitors are installed, Intercom function between all Monitors in the system becomes available. There are 3 Intercom functions to choose from:

 **1. Inner Call:** all Monitors in the House system will ring at the same time. When one of the Monitors answers the call, all other Monitors will stop ringing. In Apartments system can be used if multiple Monitors has been installed in one of the apartments. All Monitors should be programmed with same User Code. In addition one Monitor should be programmed as Master and other as slaves

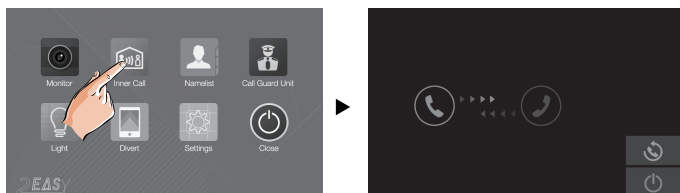

\* Use " " or " " to adjust the microphone volume

\* Touch  icon to end the call

2. **Namelist:** Allows to call one specific Monitor at the time in House system or to call other apartments in Apartment system. All Monitors should be programmed with unique User Codes/Addresses with DIP switches. See 'User Codes Tables' on page 18



\* Use < or > to scroll pages

\* Touch  to redial

\* Calling ends automatically after 40 seconds if nobody answers the call

3. **Intercom with Guard Monitor:** Applicable only for Apartments system if there is a concierge which has a Monitor. Apartment can call the concierge or concierge can call any apartment in the system

#### How to set the Monitor as a Guard Monitor


Code 8004# is used to set the Monitor as a Guard Monitor

Code 8005# is used to cancel this function

## Manual Monitoring Function


Touch anywhere of the screen or press the **MENU** button on the screen in standby mode

Touch **MONITOR** to enter Monitor Select  page

Note: Press  **TALK/MON** button in standby mode to monitor the Master Door Station in shortcut

#### Monitoring Door Stations/CCTV Cameras

DS1~4 and CAM1~4 can be selected to monitor individually

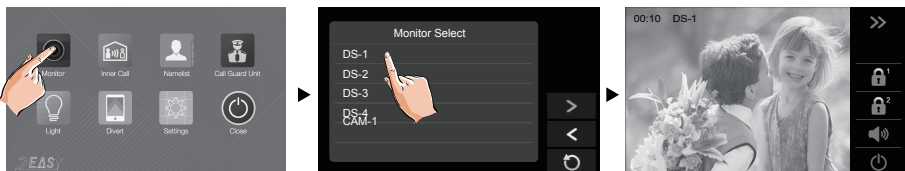


\* During Manual Monitoring there is no Audio by default

\* Touch  icon to enable the Audio



## Operating Staircase Light

To use this function, the staircase light should be connected with additional Interface DTRLIC  
Touch **Light** icon on home page or touch  icon during monitoring or talking to turn the light On



\*Touch **Light** icon again to turn off the light or it will be turned off automatically after 60 sec

\*Touch  icon again to turn off the light or it will be turned off automatically

## Call Divert Function

Forwarding a call from the system to a mobile phone requires an additional TPS Telephone Interface or GSM Interface. Up to 3 mobile or land linenumbers can be programmed

**Setting Divert Number:** On the Home page, touch **Divert'** icon  
Touch the telephone number frame and type in the number/s using digital keypad  
Touch # to save the setting



There are two Divert Modes available to choose from

1. Divert, **Simultaneously**: call will be diverted immediately. All Monitors and home telephone handsets will ring. All Monitors will come On with video from Door Station. Call can be answered from any Monitor or home telephone handset

2. Divert, **If No Answer**: If Monitor is not answered within 30 s, call will be diverted to the number programmed. Monitor/s will stop ringing after the diversion. Talking time is limited to 90 seconds

**IMPOR TANT**: If multiple Monitors installed, they should be programmed Master/Slave/s. Program Divert mobile number/s on the Master Monitor and they will be shared with other Slave Monitors automatically

**NOTE**: Remove 'Voice mail' in your mobile phone if you want calling to a next number; if first didn't answer

## Monitor Settings

Here you can set quantity of Door Stations and CCTV cameras, and monitoring time


1. On Home page, touch **Settings** icon
2. Touch (+) / (-), or (<) / (>) icons to change the values



**Note**: Touch  icon to exit and return to Home page. New settings are saved automatically

## Ring Tone Settings


Here you can set ring tones for multiple Door Stations and Intercom between Monitors to distinguish different calling sources

On the Home page, touch **Settings** icon -> 


Touch Door Station, Intercom, Bell Button tone individually

Touch (+) / (a) and (-) / (>) on to change. Setting will perform immediately



**Note:** Touch  icon to exit and return to Home page


## Changing Language


- On the Home page, touch **Settings** icon ->  **Language..**
- Choose desired language and touch (✓) to save the settings




## Restoring to Factory Default Settings

To recover factory settings

- On the Home page, touch **Logo** icon to enter **About** page
- Touch  icon to restore to default

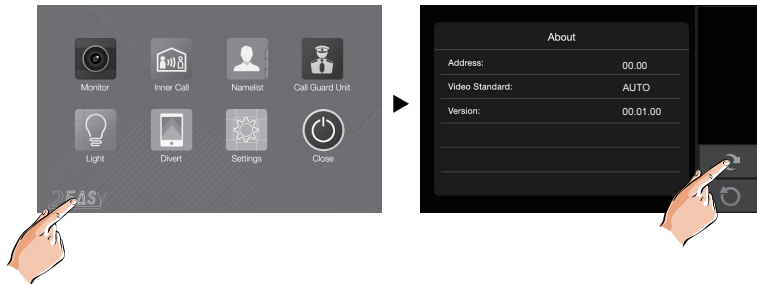

## Entering Installer Setup


- On the Home page, touch **Logo** icon to enter **About** page
- Press and hold for 2 sec **UNLOCK** button 
- Digital keypad will be shownType in desired code/s following by#

For example:

8000 # -Master; 8001 # - Slave 1;

8006 # Power saving mode Off;

8405 # - Unlockingtime is 5 sec

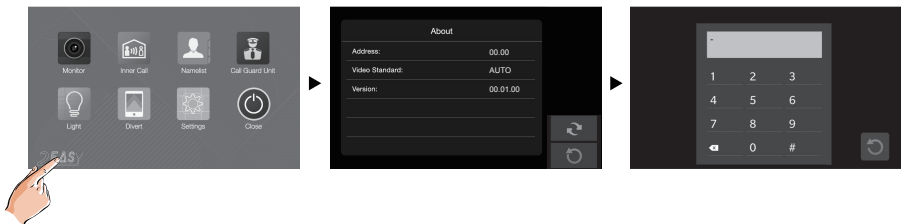

## ■ Setting Codes Tables

Code	Setting Item	Code	Setting Item
2412	Reset To Default Setting	8016-8017	Bypass Enable/Disable
2499	Restore Factory Settings	8401-8499	Unlock Time
8000	Master Monitor	8018-8020	Video Display Standard
8001~8003	Slave Monitor	9015-9016	Enable/Disable Intercom Call
8006-8007	Setting Slave Monitor Panel On/Off	9017-9018	Screen Ratio 4:3/16:9
8010-8011	Unlock Mode:Close/Open		

## ■ Power Saving Mode On/Off

By default the system is set to Power Saving Mode, where only the first Monitor in the system comes On with video when Door Station called. All other Monitors will ring but without video. Video will be transferred to the Monitor which answers the doorbell call.

To switch the power saving mode Off: (so all Monitors ring with video) tick 'Slave Panel On' on the 'Address Setting' page or type in code 8006 # on 'Installer Setup' page



## ■ Entering Address Setting Page

Toggle one of the DIP switches and it will trigger Address Setting page to come on screen.

There are two way to set the Address/User Code: via DIP switches on the rear of monitors or via Address Setting page

Select DIP Switcher Set Address setting, then, the total 32 User Codes will be displayed

then, the total 32 User Codes will be displayed

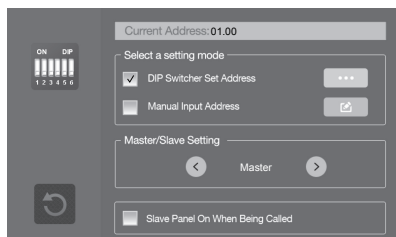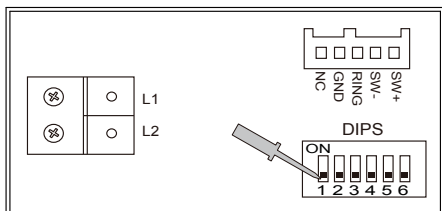

## ■ Multiple Monitor System Configuration

There are two way of connecting multiple Monitors:

1. **Daisy Chain** - each Monitor connects to a next Monitor
2. **Star Connection** - all Monitors connects to a centralpoint

Up to 16 video Monitors can be connected in a House system. Up to 4 Monitors in each apartment for Apartments system. Each Monitor in either system must be programmed with a 'User Code' - the address

### How to Program the 'User Code' for Daisy Chain Connection

All Monitors must have same User Code '0' and programmed as Master/Slaves

 
Program first Monitor as Master, all others as Slave 1, Slave 2, Slave 3

If there are more than 3 Slave Monitors in the system, program them with different User Codes starting with Code 0, 1, 2, 3, 4 and so on as for Star connection

In addition to User Code programming, last Monitor in the chain have to have DIP6 set On (end of line). Applicable Intercom unction for Master/Slave programming- 'Inner Call' - all Monitors ring at the same time. Intercom by 'Namelist' requires different programming, same as for Star connection

### How to Program the 'User Code' for Star Connection



All Monitors mustbe connected to an additional hub-DBC4A distributor. One DBC4A can connect up to 4 video Monitors. Each Monitor in the system should be assigned with the unique 'User Code' according the tables on page 18 and have DIP6 set On in each Monitor in the system



#### End of line setting with DIP-6

DIP state	Setting	DIP state	Setting
	Monitor not at the end of bus line		Monitor at the end of bus line

There are two ways to program User Codes: via DIP-switches on the rear of the Monitor or via 'Address Setting' page

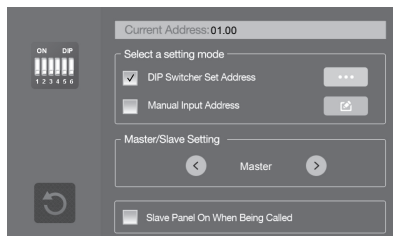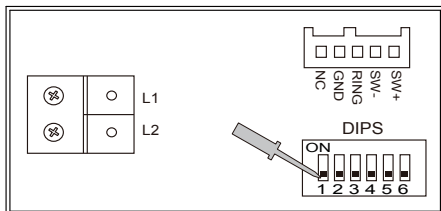


On 'Address Setting' page, select Manual Input Address setting mode, then touch 

Type in User Code using digital keypad

Touch # key to save

Touch  key to delete

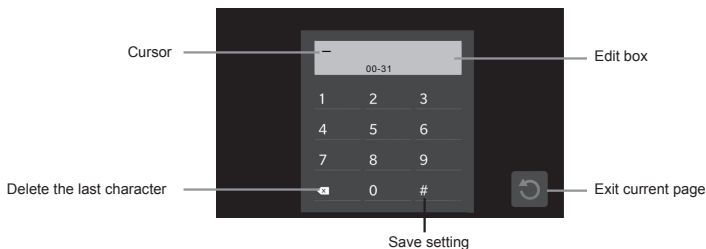

































Always start with User Code 00 for House system and 01 for Apartment system.

Range of codes available 00-31. In addition program all Monitors as 'Master'. Applicable Intercom Function for such programming: 'Intercom by Namelist' - to call to a specific Monitor in the system


## USER CODES TABLES


Select DIP Switcher Set Address setting, then,  total 32 User Codes will be displayed on the screen. Same as in picture below

Note: In Apartment system program Apartment 32 with User Code '0'

 ID=0	 ID=4	 ID=8	 ID=12	 ID=16	 ID=20	 ID=24	 ID=28
 ID=1	 ID=5	 ID=9	 ID=13	 ID=17	 ID=21	 ID=25	 ID=29
 ID=2	 ID=6	 ID=10	 ID=14	 ID=18	 ID=22	 ID=26	 ID=30
 ID=3	 ID=7	 ID=11	 ID=15	 ID=19	 ID=23	 ID=27	 ID=31

## Screen Calibration

- In standby mode, press  **UNLOCK** button **and** hold for 3 seconds
- Red cross symbol will appear
- Keep touching Red cross symbol until calibration complete and OK! will appear

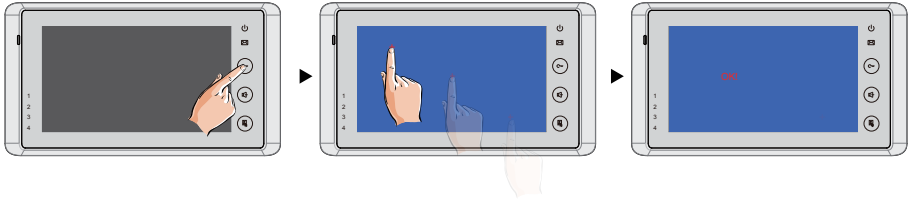

## Specification

- Power supply for indoor monitor: DC 24V
- Power consumption: Standby 15mA; Working 400mA
- Monitor screen: 7 Inch digital color LCD
- Display Resolution: 800\*3(R, G, B) x 480 pixels
- Video signal: 1Vp-p, 75Ω, CCIR standard
- Wiring: 2 wires, no-polarity
- Dimensions: H125×W225×D23mm



# WARRANTY CARD

NB Please keep this document safe, as it is proof of your Warranty  
Your Video door system comes with a one year Manufacturers Warranty. When used normally, the following services are offered:

1. Replacement for malfunctioning parts in first three months
2. Repair free of charge for malfunctioning parts in first year

The following actions will void the Warranty:

1. Damage to the device during installation
2. Damage to the device through misuse
3. Opening and/or disassembling the device
4. Attempting to force the device to perform functions for which it is not intended
5. Attaching the device to power supplies other than those recommended by the manufacturer

Distributor for Warranty purposes:

Intelligent Home Online Ltd

62 Hartley Old Road

Purley

Surrey

CR8 4HJ

+44 (0)20 86170015

[www.intelligenthomeonline.com](http://www.intelligenthomeonline.com)

Product: Cronus no memory version

Serial Number: \_\_\_\_\_

Invoice N: \_\_\_\_\_

Purchase Date \_\_\_\_\_



Cronus 2-wire series

The design and specifications can be changed without notice to the user.  
Right to interpret and copyright of this manual are preserved.