

## DX Monitor V2.1.1 Firmware Update

 
This guide is to help you to upgrade DX471 via SD card.

### 1. Features


- Support VDPConnect APP, more stable media transmit
- WiFi offline fixed
- Online update now supports breakpoint resume.

### 2. Update

- a. Download, English standard version:

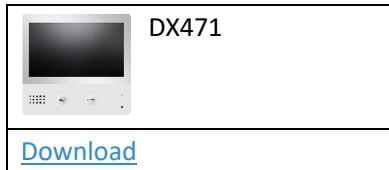

 - b. Copy whole **folder** "Dx471\_FwUpdate" directly to the root directory of SD card. (SD card shall no more than 32G)

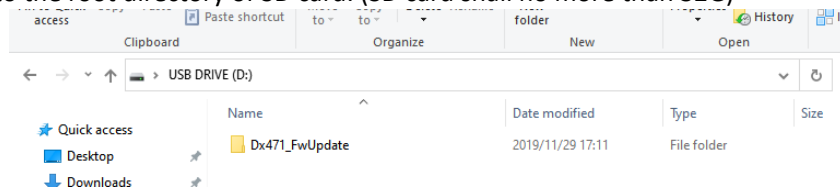

Structure: USB Drive (X:): \Dx471\_FwUpdate\ DX471AllFwupdate.zip

- c. Slide out and open the hatch on the rear side of the DX471, and click in the SD card as below:



DX471

- d. Power on DX471 and wait the system booting, and in the menu "Settings" -> "General" -> "SD card", and in this page, press "Firmware Update"
- e. With long beep, state light turns to red and flash, during that please do not power off. And leave the screen as show, this will takes 2min, and it will reboot itself.
- f. **Go into "settings" -> "General Setting" -> "Restore to default" -> touch "Restore and backup" twice.**
- g. After update, with long beep state light turns to green, and system will reboot automatically, after reboot check in "Settings" -> "About", the "S/W Ver: V2.1.1.22XXXXXXXXXX" means Dx471 in latest firmware.