

SUPLEMENTARY INSTALLATION MANUAL

FOR ALEA & TACTILE DIRECT CALL APARTMENT SYSTEM

After you have connected your system according the diagram, you will need to program the monitors.


Open “Menu” on the monitor, and go to “Installation”, and set every monitor as “Main” and number of the monitor according to the drawings below.

The Monitor will ask for a password to confirm the settings.


Input ▲▲▲▼ to confirm.

Note 1: If some apartments have more than one monitor, each additional monitor will be set to the same number as the Main monitor but “Additional”


Note 2: You will find samples of apartment’s numbers in your Door station. They are printed on paper and can be changed to any name or number you like.

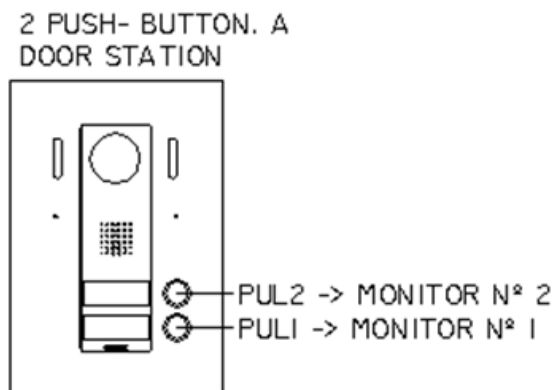


2 PUSH- BUTTON. B
DOOR STATION

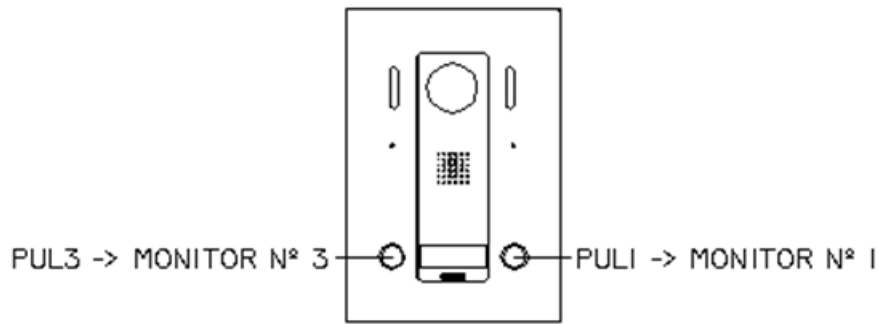


4 PUSH- BUTTON
DOOR STATION

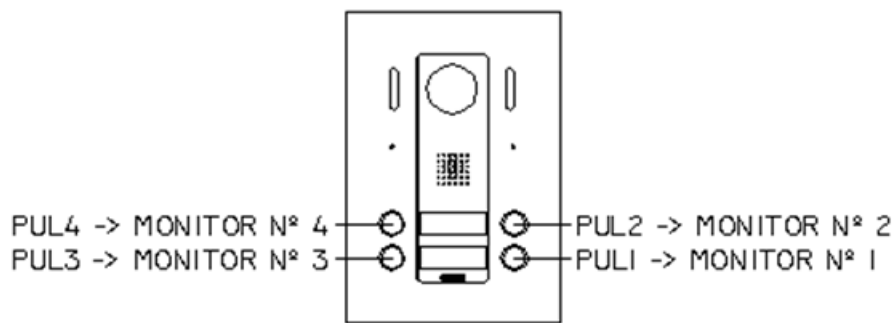


6 PUSH- BUTTON
DOOR STATION

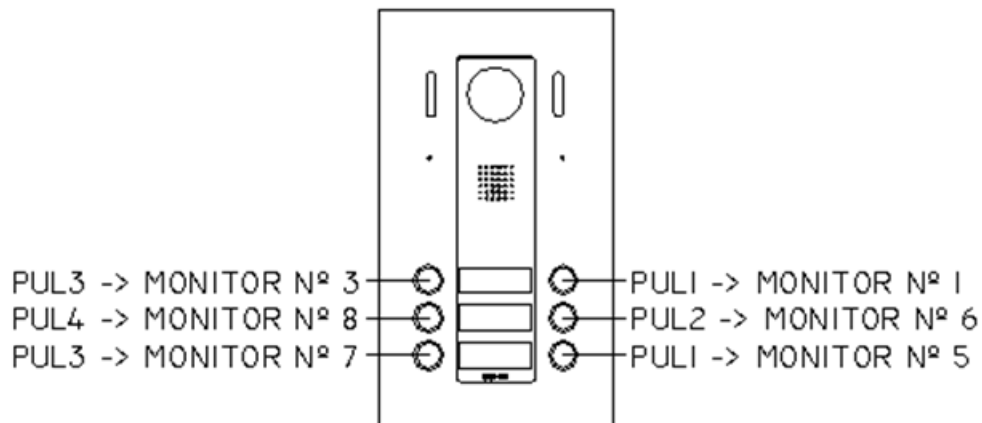

8 PUSH- BUTTON
DOOR STATION

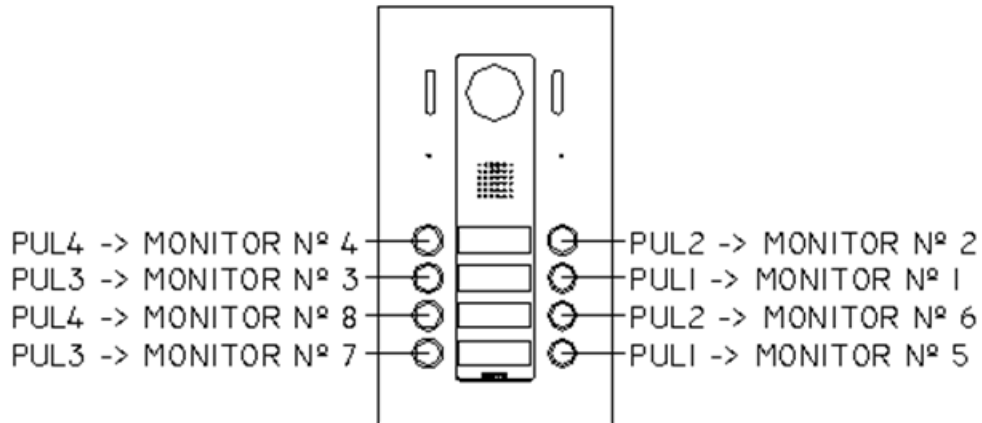

10 PUSH- BUTTON
DOOR STATION

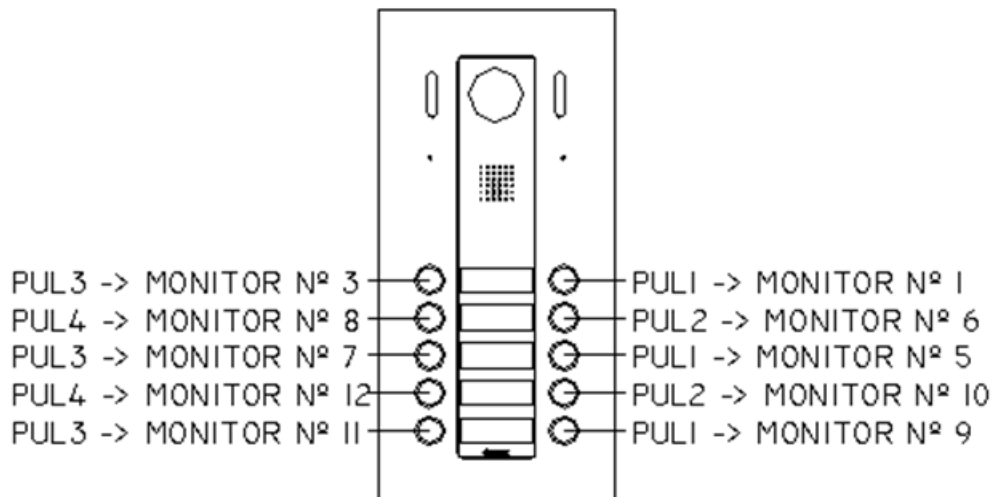

12 PUSH- BUTTON
DOOR STATION

