

DH850P Virtual user


Virtual user is used for Calling to APP without Monitor

What is virtual user [↗](#)


Virtual user is user without physical monitor but call directly to APP, virtual user could also unlock doors via app. (Maximum 20 for each system)

Before creating a virtual user, the door station needs to be connected to the Internet of things through DH-LAN or WIFI.

Enable Divert and reset account [↗](#)

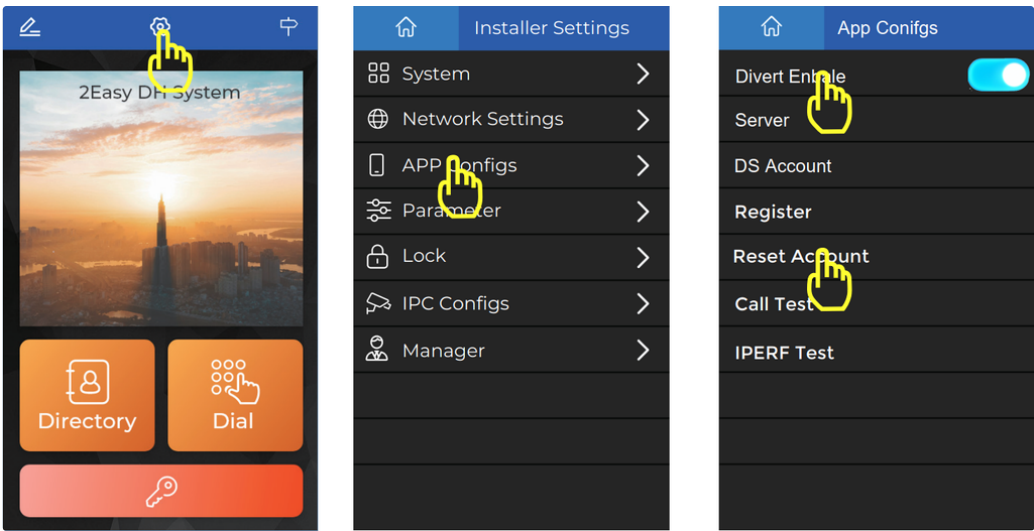


Virtual user menu [↗](#)

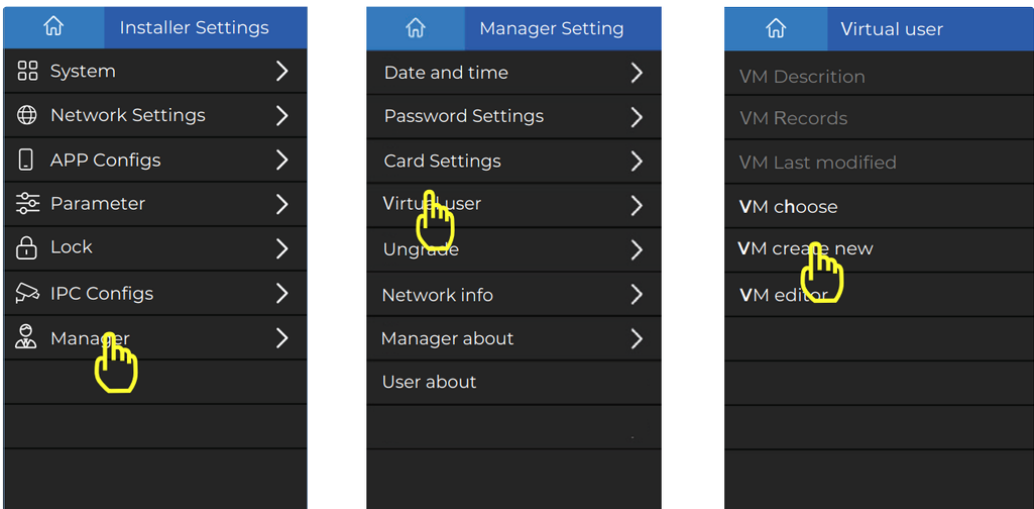

 You can reach this menu via unlock with the manager password, which by default is "1527"

Create virtual user

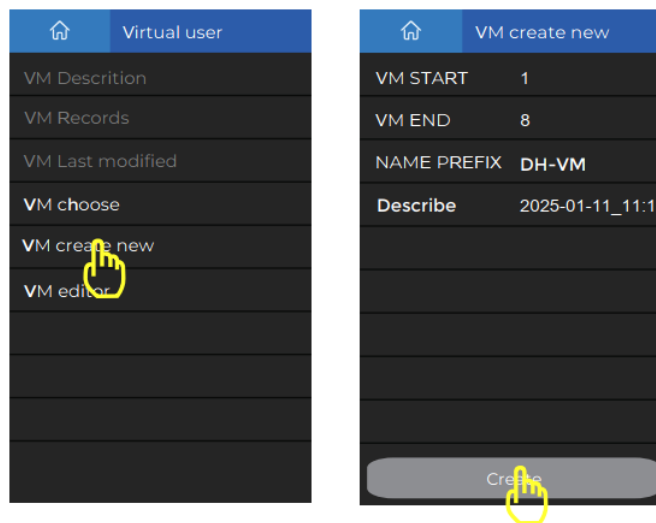


VM START 1(The start address of the virtual user to be created)

VM END 8 (The end address of the virtual user to be created)

NAME PERFIX The prefix of the Virtual user name.

tap Create,then tap √ to confirm the creation.

Get the virtual user account from the server and send it to the door station

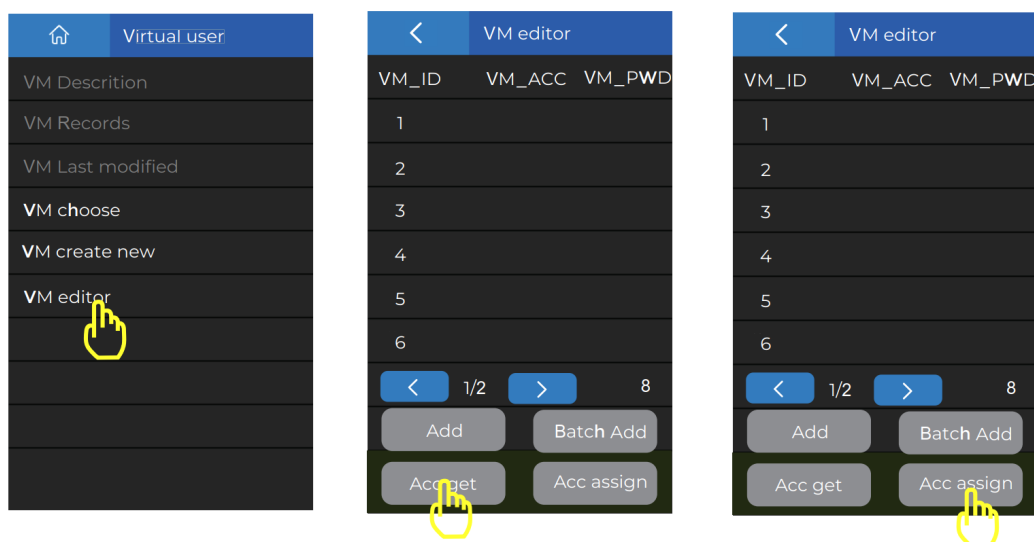

 You need to wait about 15 seconds after clicking "ACC get", and then click "Acc assign".

Virtual user Editor [🔗](#)

Virtual Editor shows all Virtual users

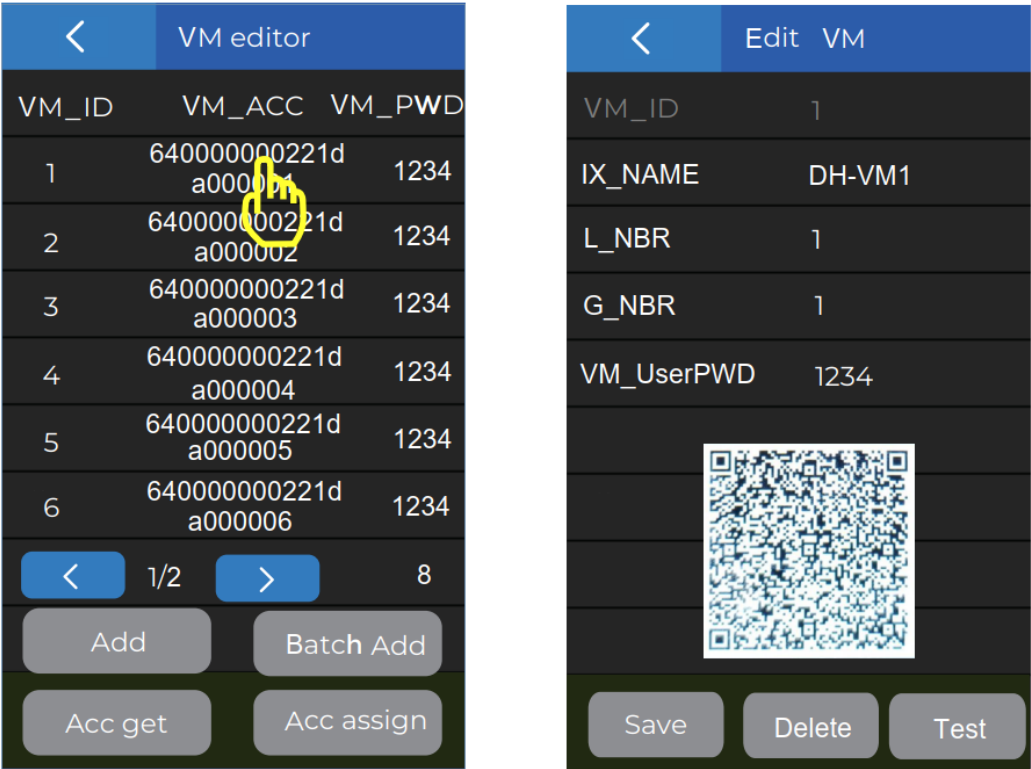


Chart information [🔗](#)

Item	Value
VM_ID	Virtual user ID(immutable)
IX_NAME	The name of the virtual user
L_NBR	Reserve
G_NBR	Reserve
VM_UserPWD	The password of the virtual user's account

Button information [🔗](#)

Item	Value
Add	to Add a virtual user
Batch Add	add multiple virtual users at once
Acc get	Register with the server based on the created virtual user
Acc assign	Get the information of the successfully registered virtual user account from the server

Save	Save the virtual user information
Delete	Delete the virtual user
Test	After scanning the QR code of the virtual user with the APP, click the Test button to test the virtual user

Test virtual users

Scan a virtual user's QR code using the VDP Connect app

The door station calls the virtual user